

| thousands of miles: | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | 105 | 110 | 115 | 120 |
|--------------------------------------|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| months: | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 | 126 | 132 | 138 | 144 |
| Check driver's floor mat | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x |
| Inspect and adjust all fluid levels | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x |
| Rotate tires | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x | x |
| Visual inspect brake pads/discs | x | x | x | x | x | | x | x | x | x | x | | x | x | x | x | x | | x | x | x | x | x | |
| Inspect brake pads/discs [3] | | | | | | x | | | | | | x | | | | | | | x | | | | | x |
| Replace engine oil and oil filter | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x | | x |
| Replace engine air filter | | | | | | x | | | | | | x | | | | | | x | | | | | | x |
| Clean cabin air filter (solar) | | x | | x | | x | | | | x | | x | | x | | | | x | | x | | x | | |
| Replace cabin air filter (solar) | | | | | | | | x | | | | | | | | x | | | | | | | | x |
| Clean cabin air filter (non-solar) | | | x | | | | | x | | | | | | x | | | | | | | x | | | |
| Replace cabin air filter (non-solar) | | | | | | x | | | | | | x | | | | | | | x | | | | | x |
| Inspect transaxle fluid | | | | | | x | | | | | | x | | | | | | | x | | | | | x |
| Inspect engine/Inverter coolant | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Replace engine/Inverter coolant | | | | | | | | | | | | | | | | | | | | x | | | | |
| Inspect ball joints & dust covers | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Inspect drive shaft boots | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Inspect exhaust system | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Inspect radiator & condenser | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Inspect steering gear box | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Inspect steering linkage & boots | | | x | | | x | | | x | | | x | | | x | | | x | | | x | | | x |
| Inspect fuel lines, tank & vent | | | | | | x | | | | | | x | | | | | | x | | | | | | x |
| Inspect fuel tank cap gasket | | | | | | x | | | | | | x | | | | | | x | | | | | | x |
| Replace spark plugs | | | | | | | | | | | | | | | | | | | | | | | | x |

[3]Inspect thickness measurement and disc runout.