



Prius

Vertical Cargonet


Installation instructions

Model year:	2009
Vehicle code:	ZVW30*-AHXE BW
Part number:	PZ416-G0340-ZA


Manual reference number: AIM 001 645-0

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted

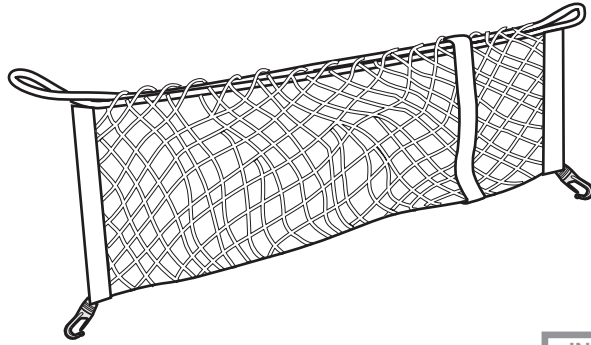A


1x

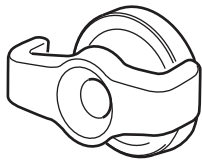E

1x

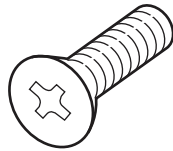
F

1x

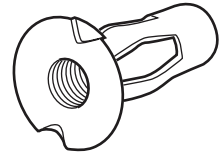
G

1x


			 Ø 2 mm Ø 7 mm

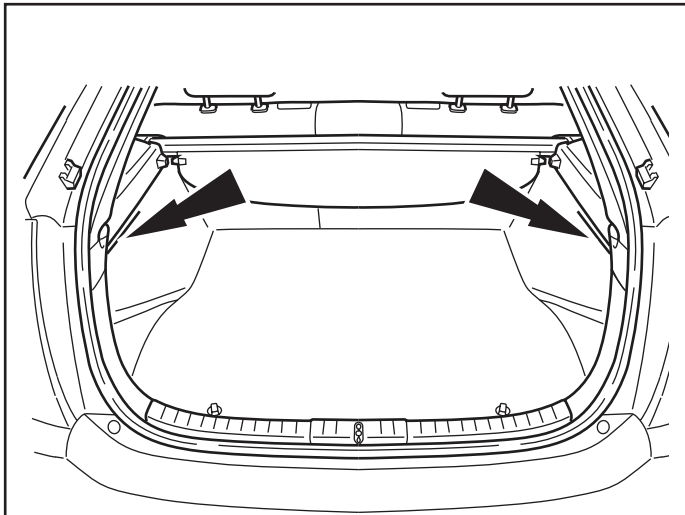


1

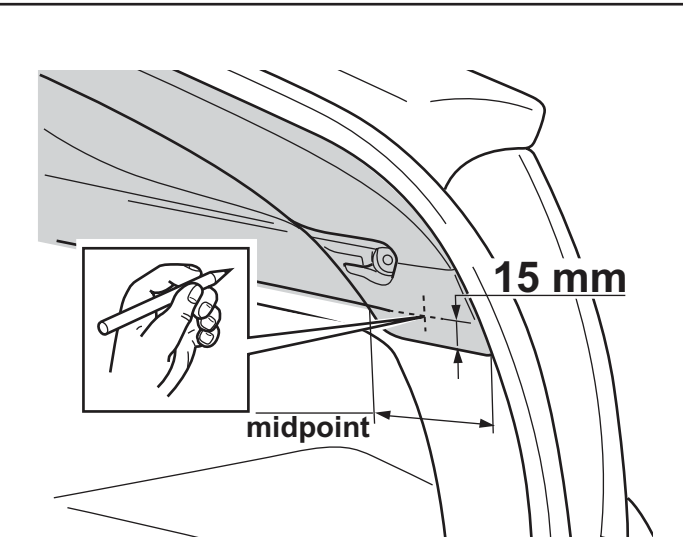


2

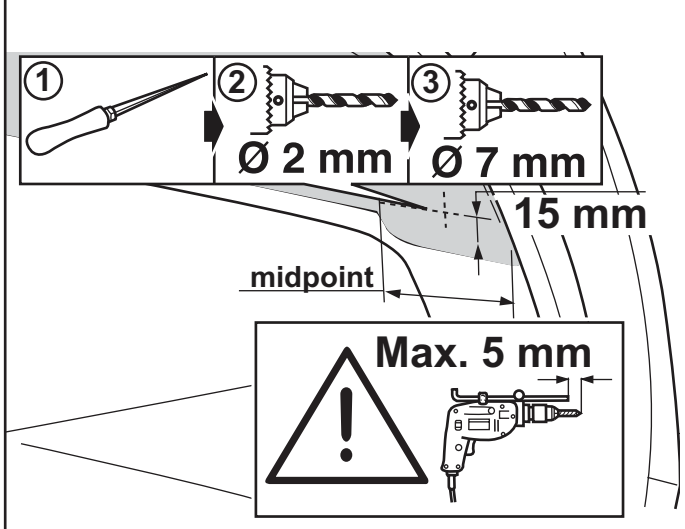


3

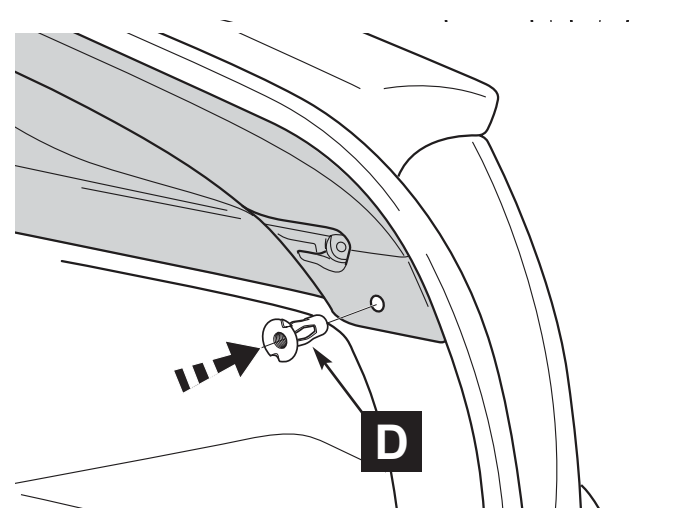




4

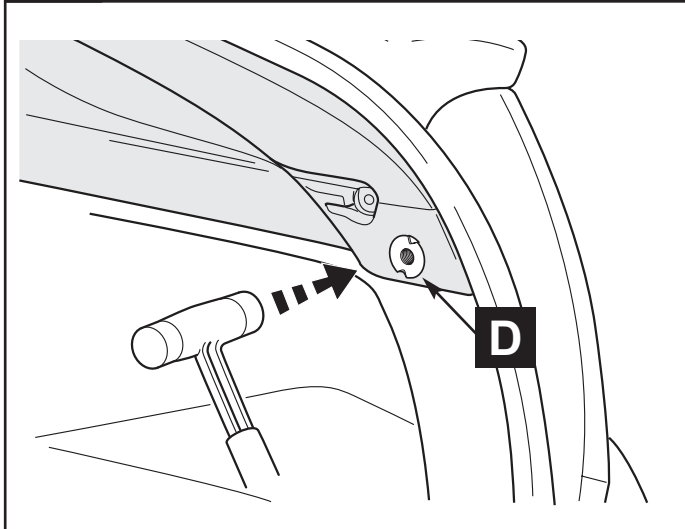

5

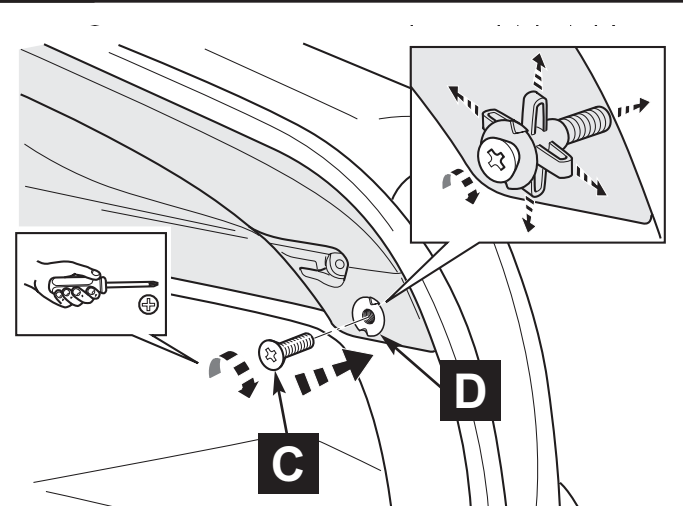

6

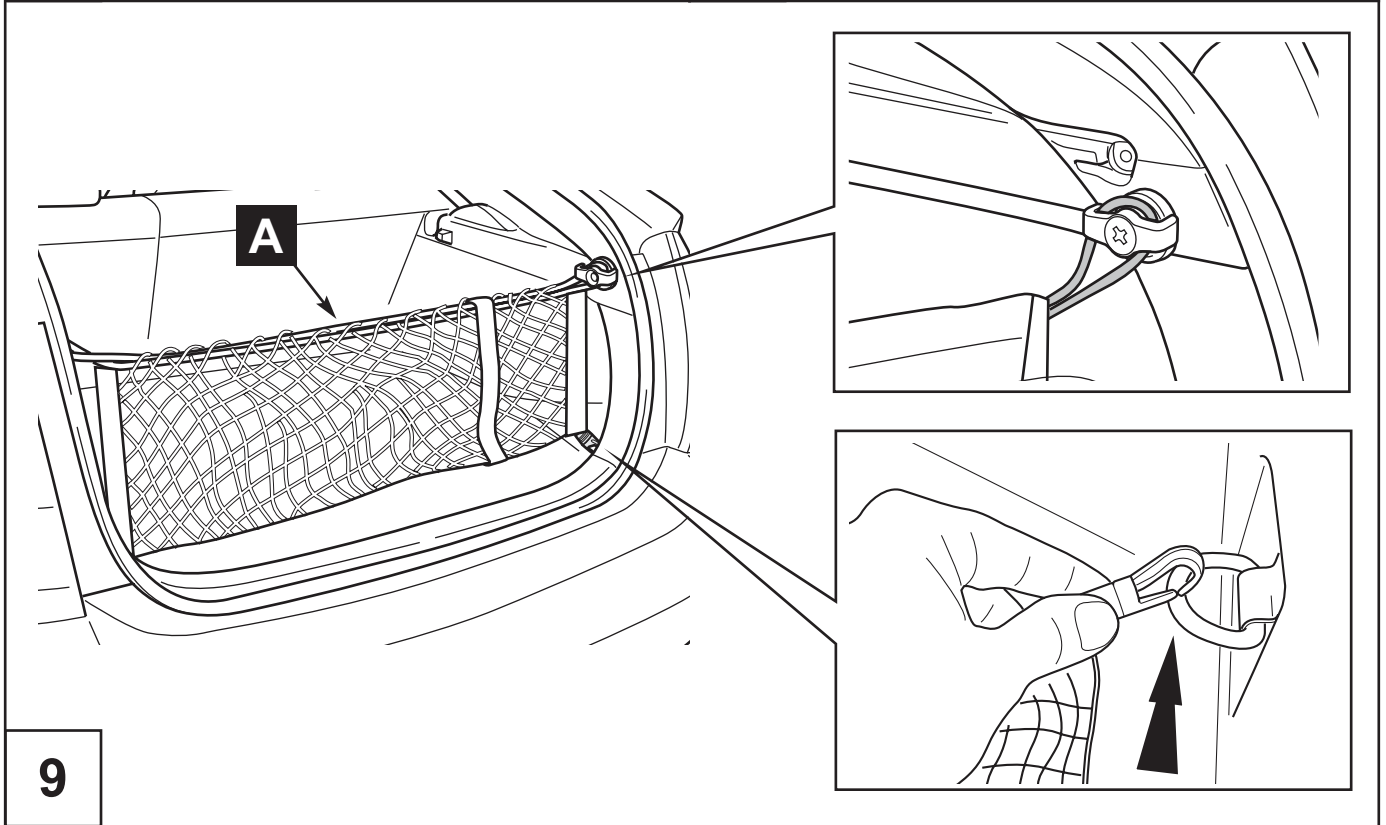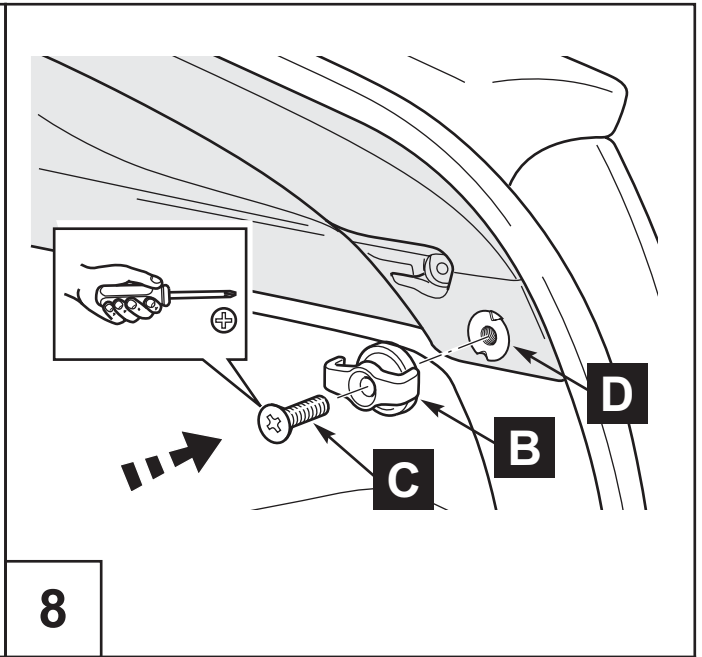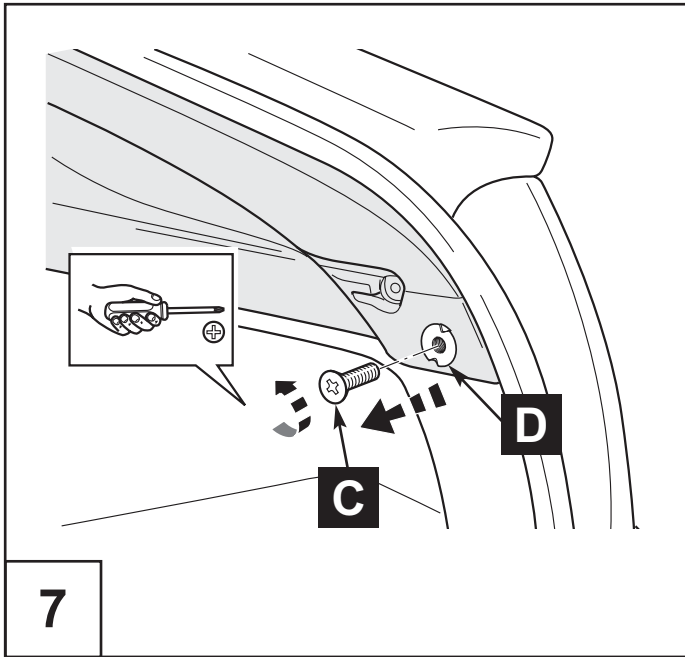

INFORMATION ONLY
! NOT TO BE COPIED !